Second, make sure the sensitivity dial on the right of the wheel chassis is set in such a way that it will not cause under or over steering in your game. This can be "tweaked" in game play to make sure it fits each game exactly and matches your playing style. Work with the Sensitivity Dial to find the best fit for you!

My action game does not control properly?
The wheel's left analog stick function lets you play many action driving games but you will not have access to the RIGHT analog stick functions. Some games are playable in this manner, others are not. Make sure your games control is left analog stick only or left stick dominant and then you should be able to play.

My wheel won't stick to the table?
Try cleaning the suction cups on the wheel and the table surface you are playing on. Dirt and debris will affect the suction. Also, make sure the surface is smooth and flat Tilted, warped or textured surfaces to not make good playing surfaces for to the wheels suction cup mounting design.

My wheel won't turn more than 270 degrees?
This is NORMAL! Turning it past its standard limitations will damage the wheel making it inoperable or less effective.
Excessive force is not recommended or necessary when operating wheel.

aneously (L2+R2+START), the SET LED will be flashing in beginning and then turn to OFF, indicating the wheel is return to the default settings.

Steering Mode Selection (for PS2 only)

Analog Mode
This is the default mode of your wheel. Most driving games require this. While in this mode you will see the Analog LED lighted continually. While in this mode the wheel will respond in the same manner as the left analog stick. To deselect (or return to this mode) press the **SELECT** button on the wheel console and the ○ button at the same time.

Digital Mode:
While in this mode you will see the Analog LED off. This mode will create a simulation of the digital control pad effect that will let you play some of your older racing games or some driving/action games more effectively. However, in this mode some analog only games will not respond. To deselect (or return to this mode) press the **SELECT** button on the wheel console and the ○ button at the same time.
Note: for most PS2 games, the mode is set as analog mode automatically at the beginning of the game, as indicated by the Analog LED.

Tryb PC-USB:

WAŻNE:
Zainstaluj sterowniki przed podłączeniem kierownicy do komputera

- Włóż dysk ze sterownikami do napędu
- Uruchom program „setup"
- Zgodnie z informacjami na ekranie dokończ instalację
- Podłącz wtyczkę do wolnego portu USB w komputerze

Tryb PS1/2:
Podłącz do wolnego gniazda kontrolera w konsoli.

Użytkowanie

Granie na biurku lub stole
Upewnij się, że kierownica została poprawnie podłączona do komputera lub konsoli. Ustaw kierownicę w optymalnej pozycji w niedalekiej odległości od telewizora lub monitora. Upewnij się, że wszystkie przyssawki dobrze przylegają do powierzchni stołu. Zalecamy zdjęcie obrusa jeżeli znajduje się na stole.

Opis funkcji

Kierownica
Zapewnia pełną kontrolę nad grą. Dzięki analogowej zasadzie działania, jazda samochodem w grze staje się o wiele bardziej realistyczna. Jest również emulacją manipulatora analogowego (prawo-lewo).

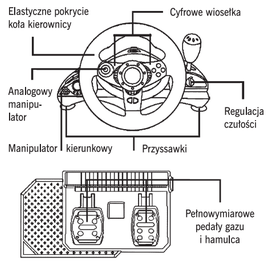

Relokacja funkcji przycisków
6 przycisków: L1, R1, L2, R2, lewy pedał i prawy pedał mogą zostać przeprogramowane na: △, ○, ×, □, L1, L2, R1 i R2 według następującej procedury:

1) Naciśnij jednocześnie przyciski „SET" i „X". Dioda LED „SET" zacznie migać i zapali się na stałe informując o wejściu w tryb ustawień.
2) Naciśnij jeden z przycisków, którego funkcja ma być relokowana (L1, R2, L2, R2, L-pedał lub P-pedał)
3) Naciśnij przycisk któremu chcesz przypisać relokowaną funkcję (△,○,×,□, L1, L2, R1 i R2)

Reset
Aby powrócić do ustawień fabrycznych naciśnij równocześnie przyciski „L2+R2+START".

Wybór trybu pracy (tylko Playstation)
Tryb analogowy i cyfrowy
Jest standardowym trybem pracy kierownicy. W tym trybie dioda LED „analog" jest zapalona. Aby zmienić na tryb cyfrowy naciśnij przycisk „select". Dioda „analog" zgaśnie.

Aby powrócić do trybu analogowego ponownie naciśnij przycisk "select". Dioda LED zapali się.

Tabela funkcji

Przycisk - funkcja	PS2	PC
Żółty przycisk	△	1
Czerwony przycisk	○	2
Niebieski przycisk	×	3
Fioletowy przycisk	□	4
L - wiosło	L1	5
P - wiosło	R1	6
L2	L2	7
R2	R2	8
L3	L3	11
R3	R3	12
SELECT	SELECT	9
START	START	10
Krzyżak	D-PAD	VIEW HAT
Osie kierownicy	L - STICK X	OŚ X
Analogowy manipulator	L - STICK	OŚ X
L - PEDAŁ	□	OŚ Y ↓
P - PEDAŁ	×	OŚ Y ↑
+	R2	8
-	L2	7
SET	SET	SET

Rozwiązywanie problemów

Kierownica nie działa
Upewnij się że kierownica jest prawidłowo podłączona do konsoli lub komputera.

Kierownica jest podłączona ale nie działa
Upewnij się, że został wybrany właściwy tryb pracy (PS/2)

Kierownica działa ale pedały nie
Upewnij się, że pedały zostały podłączone do kierownicy. Spróbuj odłaczyć i ponownie podłączyć pedały do kierownicy.

Kierownica nie działa w danej grze
Kierownica to tylko urządzenie. Ostateczna jej konfiguracja odbywa się z poziomu i za pomocą mechanizmów danych gier. Przeczytaj uważnie instrukcję gry w dziale konfiguracja kontrolerów gier.

Auto Centering
The Wheel center position is automatically set when switching in your game system.

NOTE:
Note: Please ensure that the steering wheel unit is in initial position when switching in your game system. If the steering wheel unit is not in the neutral position, that position will be deemed the neutral position when switching in your game system.

Sensitivity settings
The sensitivity can be adjusted by turning the Sensitivity dial. The higher the sensitivity, the faster the steering wheel reacts to being turned, i.e. even a small movement of the steering wheel produces a distinct reaction in the screen vehicle and vice versa. You will feel the center sensitivity position when turning.

270° turn limiter (from max left to max right)
Please do not try and turn the wheel past its limitations. Doing so may damage or effectively ruin the steering wheel. Excessive force is NOT necessary to get the most out of your wheel. If you feel you need faster reaction time, adjust your steering sensitivity.

Function relocation
There are 6 buttons – L1, R1, L2, R2, L-pedal and R-pedal which can be set to △, ○, ×, □, L1, L2, R1 and R2 action button with the following procedures.

1) Press SET button and then "X", the SET LED will be flashing in beginning and then turn to ON., indicating the wheel is in setup environment.
2) Press one of the relocation buttons (L1. R2, L2, R2, L-pedal and R-pedal), for example the L-pedal
3) Press a action button, for example '△' button, which is desired to be relocation onto the "L-pedal", The SET LED extinguish and the setup routine is terminated.

The L-pedal, in this example, will now become the '△' action

Reset
You can return all the settings to its default values by press "L2", "R2" and "START" button simult-

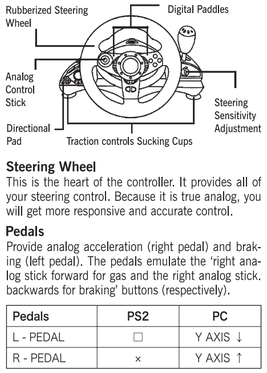

Steering Wheel
This is the heart of the controller. It provides all of your steering control. Because it is true analog, you will get more responsive and accurate control.

Pedals
Provide analog acceleration (right pedal) and braking (left pedal). The pedals emulate the 'right analog stick forward for gas and the right analog stick. backwards for braking' buttons (respectively).

Pedals	PS2	PC
L - PEDAL	□	Y AXIS ↓
R - PEDAL	×	Y AXIS ↑

Gear shifter
Emulates buttons as below:

Gear shifter	PS2	PC
backward	L2	7
forward	R2	8
R + R-PEDAL	△	1

Directional Pad
This emulates the D-pad found on most control pads. This is used for navigating through the menus and making menu changes.

Mini analog stick
Analog control stick mounted on the wheel for use with games such as GTA. For avoid the wrong action during playing the games, the analog stick X-axis will disable when the steering wheel is turning more than ±15°.

Action Buttons
These buttons are correspond to specific game functions detailed, in your software documentation and options menu.

CHASE BOOSTER

DUAL ACTION

MT176

Only for True Gamers

USER GUIDE

Thank you for purchasing the 2in1 steering wheel for use with PS2 and PC Game Systems. The 2in1 steering wheel will give you precision control and enhance the realism of all your favorite driving games. Before using the wheel, please read the users guide. It will help you how to understand use your universal steering wheel and get the most from the features it has to offer.

Features

- PlayStation®2 /PC-USB fully compatible
- F1 Style and Standard manual transmission shift options
- Sensitivity adjustment dial for in-game adjustment of your wheel sensitivity
- Lap-mount and table-mount options with traction tape to avoid sliding.
- Analog control stick mounted on the wheel for use with games such as GTA.
- Gripped and weighted pedals with precise analog control.
- Fully rubberized steering wheel with ergonomically designed grip and weight.
- Realistic vibration feedback for effect-feeling on every crash, bump and turn
- Functional L3 and R3 buttons (analog stick and center 'horn' button) to give you full interaction with your favorite games.(for PS2)

System requirements

- IBM PC compatible equipped Pentium processor or higher and USB port where has maximum 500mA power source.
- Microsoft Windows 98/ME/2000/XP operating system
- Minimum 32MB and 64MB RAM is recommended for Microsoft Windows 98 or ME
- Minimum 64MB and 128MB RAM is recommended for Microsoft Windows 2000 or XP
- Minimum 32MB hard disk space
- CD-ROM drive
- Super VGA 256 color monitor

Installation

Connection between the wheel and the pedals:

NOTE:
Pedals and the wheel must be firmly connected before connecting the wheel to the console.

PC-USB mode:

Important:
Install the driver before connecting the steering wheel to your PC

- Insert driver disk to drive in your computer
- Click "Setup" file to start install driver software
- Follow the on-screen instruction to complete the installation.
- Plug the USB connector to free USB port

NOTE:
Windows may prompt you to insert the Windows 95/98/ME/2000/XP CD-ROM into the computer to install a new device.

PS1/2 mode:
Connect to free gaming port in Your console.

Operational Use

Playing on the desk or table
Ensure that the wheel is plugged into the game system. Place the wheel in a comfortable driving position near enough to your TV to ensure visual comfort while playing.

Function Descriptions

Product Layout



Function table

Button - function	PS2	PC
Yellow button	△	1
Red button	○	2
Blue button	×	3
Purple button	□	4
L - HAND	L1	5
R - HAND	R1	6
L2	L2	7
R2	R2	8
L3	L3	11
R3	R3	12
SELECT	SELECT	9
START	START	10
D - PAD	D-PAD	VIEW HAT
WHEEL AXIS	L-STICK X	X AXIS
SMALL L - STICK	L-STICK	X AXIS
L - PEDAL	□	Y AXIS ↓
R - PEDAL	×	Y AXIS ↑
+	R2	8
-	L2	7
SET	SET	SET

Troubleshooting

My wheel will not power up?
Make sure your wheel is connected to the game system correctly.

My wheel is on but it is not responding?
Make sure the correctly mode is selected (for PS2).

My wheel responds but my pedals do not?
Make sure your cable is connected from the pedals to the serial port on the wheel chassis.
If pedals still do not respond, disconnect the pedals, power down the system and then reconnect the pedals, or press L2+R2+START to reset the wheel. This should restore control.

My wheel feels very strange, is over responsive, or under responsive?
Two things may need to be adjusted if you have this problem:
First, make sure that you have the driving mode selected that works with your game, either digital or analog. This can be switched by pressing Select and ○ (for PS2 only). See the Steering Modes section for more information.

CHASE BOOSTER

DUAL ACTION

MT176

Only for True Gamers

INSTRUKCJA OBSŁUGI

Gratulujemy zakupu doskonałej kierownicy z dualnym interfejsem. Dzięki temu możesz cieszyć się maksymalnie zbliżoną do warunków realistycznych jazdą w grach samochodowych zarówno na komputerach PC jak i konsolach PlayStation®2. Prosimy poświęć trochę czasu na uważne zapoznanie się z niniejszą instrukcją co umożliwi optymalne wykorzystanie funkcji Twojej nowej kierownicy.

Właściwości

- Zgodność z PlayStation®2 / PC-USB
- Realistyczne koło kierownicy i wygodna dźwignia zmiany biegów
- Pokrętło regulacji czułości
- Duże przyssawki zapewniające pewne mocowanie do blatu stołu.
- Analogowy manipulator w kole kierownicy.
- Doskonałe zaprojektowane i wyważone pedały gazu i hamulca na stabilnej podstawie.
- Technologia VIBRATION FORCE dla podniesienia realizmu gry

Wymagania systemowe

- Komputer zgodny z IBM PC z procesorem Pentium 1GHz lub kompatyilnym.
- Microsoft Windows ME/2000/XP
- Minimum 128MB RAM
- Minimum 32MB miejsca na twardym dysku
- Napęd CD-ROM

Instalacja

Podłączenie modułu pedałów do kierownicy

WAŻNE:
Moduł pedałów musi być pewnie połączony z kierownicą zanim podłączysz całość urządzenia do komputera lub konsoli.